



DAMEN | SKI- UND SNOWBOARDSCHUHE

EU	34^{1/2}	35	36	36^{1/2}	37	38	38^{1/2}	39	40	40^{1/2}	41	42	42^{1/2}	43
MP*	22,0	22,5	23,0	23,5	24,0	24,5	25,0	25,5	26,0	26,5	27,0	27,5	28,0	28,5

HERREN | SKI- UND SNOWBOARDSCHUHE

EU	32	32^{1/2}	33	34	34^{1/2}	35	36	36^{1/2}	37	38	38^{1/2}	39	40	40^{1/2}	41	42	42^{1/2}	43	44	44^{1/2}	45	46	46^{1/2}	47	48	48^{1/2}	49
MP*	20,0	20,5	21,0	21,5	22,0	22,5	23,0	23,5	24,0	24,5	25,0	25,5	26,0	26,5	27,0	27,5	28,0	28,5	29,0	29,5	30,0	30,5	31,0	31,5	32,0	32,5	33,0

*MONDOPOINT